

How to Replace Filter

All DCT Chillers



ENSURE CHILLER IS TURNED OFF BEFORE BEGINNING

- Plug the Inlet and Outlet to stop the flow of water



ALTERNATIVE: Optional Valves can be installed on the Cold Plunge Tub to allow customers to stop the flow of water by simply closing the Valve

- Using the Filter Wrench, loosen the Filter by turning from Right to Left:



- Continue turning cup until it detaches from Chiller.
Remove Filter Cup from Chiller:



How to Replace Filter

All DCT Chillers



- Remove Filter from Cup:



- Place new Filter in Cup:



Note: For best results, empty Filter Cup and wash before adding new Filter

How to Replace Filter

All DCT Chillers



- Put Filter Cup back on Chiller:



- Tighten Filter cup by turning Left to Right:



- Be sure to remove Plugs from Cold Plunge before starting Chiller:

